

# ***hipstreet***®

**HS-7DTB3-4GB**

**User Manual**



**February 2012**

Please read this user's manual carefully before use.

## **CONGRATULATIONS!**

Thank you for your purchase of this Hip Street product and we hope you enjoy using it. Please visit our website at [www.hipstreetonline.com](http://www.hipstreetonline.com).

Please ensure that you fully read and understand the information within this instruction manual prior to using your product. It is advised that you keep this

instruction manual in a safe place for future reference. We sincerely hope that this high quality product offers you endless hours of entertainment.

### **Important safety precautions**

- ≡ Always follow these basic safety precautions when using the unit.  
This will reduce the risk of product damage and personal injury.
- ≡ Do not disassemble, repair or modify the unit by yourself. Refer servicing to qualified personnel.
- ≡ Do not dispose of the unit in extreme heat to avoid explosion.
- ≡ Keep the unit away from direct sunlight or heat source.
- ≡ Do not expose the unit to rain or moisture to avoid any malfunction.
- ≡ Do not use the unit in a rather dry environment to avoid static.
- ≡ Never apply heavy impact on the unit like dropping it or placing it on a magnet.
- ≡ Clean only with a dry cloth. Make sure the unit is turned off before cleaning. Do not use liquid cleanser.

### **FCC WARNING:**

This device complies with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules and the Canadian ICES-003. Operation is subject to the following conditions:


- This device may not cause harmful interference, and

- This device must accept any interference received, including interference that may cause undesired operation.

## **1. Description of Appearance**

### **Product Structural Diagram :**

(1) Camera	(10) 5V DC Charging Port
(2) Microphone	(11) HOST USB Port
(3) Power Button	(12) Housing Screw
(4) Volume Down Button	(13) OTG USB Port
(5) Volume Up Button	(14) Mini-HDMI Port
(6) Menu Button	(15) Micro-SD Card Slot
(7) Home Button	(16) Speakers
(8) Back Button	(17) LED Indicator
(9) 3.5mm Headphone Jack	

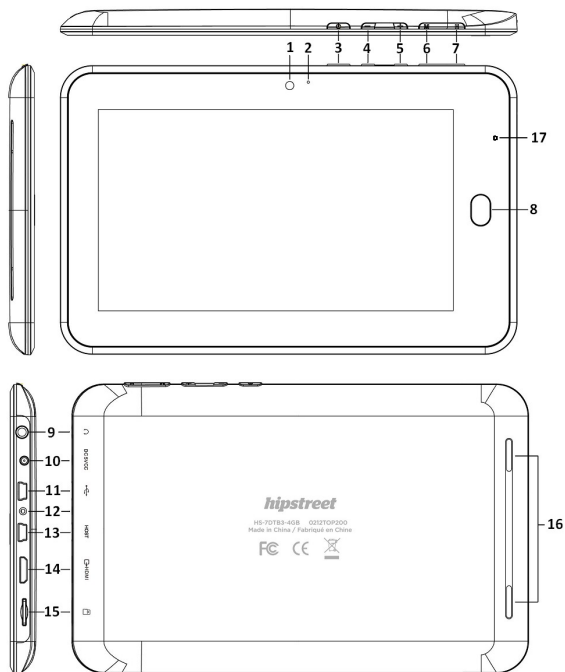

## 2.1 Battery charging

The tablet is equipped with a built-in battery. Notifications will appear when the battery is low for when to charge it.

### Power Adapter

Connect one end of the power adapter to an outlet and the other end to the 5V DC Charging Port of the tablet.

## Charging Methods

1. Once the power adapter is connected, the charging LED indicator of the battery will turn red to show that charging is in process. When the battery is full, the charging indicator will go out.
2. During the charging process, the tablet may be used normally.

## 2.2 Use of Memory Card

### Insert memory card:

Insert the memory card with correct orientation into the card slot. (Press it into the card slot until a click is heard). A prompt will appear on the top left corner of the screen: *Preparing Memory Device*.

Browse the files in the memory card:

Run the *My Pad* application. Displayed are all the files under the *LOCAL* directory. Select *SD1* at the top to browse the content in the memory card.

### Remove memory card:

Close all the files opened from the card and return to the home screen. Click *Menu*, select *Settings* → *Storage* → *external sdcard* → *unmount external sdcard*. The system will [prompt](#) *Memory device safe to remove*": Gently press the card and it will pop-out. The system will prompt: *Removed Memory Device* at the top left corner of the screen.

### Note:

1. The card should be inserted in the correct orientation; otherwise it could be damaged.

2. Please do not pull the memory out card before being prompted.

## 2.3 Storage Space

The device has three storage spaces: Internal storage, USB flash disk that can be attached at the HOST Port and Micro-SD memory cards. Internal storage of the device is not displayed; the displayed folder name of memory card is: *SD1*; the displayed folder name of external USB flash disk is *UDisk1*. System storage area can only be used for storing system files. The total internal storage space of the device is 4 GB. The storage space of USB flash disk and memory card is determined by their specific capacities.

Please refer to *9.7 storage card and device storage* for related specific information on storage.

## 2.4 ON/OFF/Hibernate

- 1. Startup:** Press and hold the power button for 2 seconds to start the unit up. The lock screen will be entered after start up. Slide unlock icon upward to enter the main interface; (slide it downward to turn off sound and repeat to turn on sound)
- 2. Shutdown:** Press and hold the power button for 4 seconds and the system will popup a shutdown confirmation window. Touch *power off* to shut the unit down.
- 3. Hibernation:** Press the power button and the system will enter a hibernation state. The screen will turn off while in hibernation. Press the power button again to wake the system up when in the hibernation state. If the battery is low when in the hibernation state, the device will shut-down after automatically staring up to [save](#)


power.

## 2.5 Screen Orientation

The system interface can automatically rotate according to the held direction of the device. The system interface will be display a vertical screen when held vertically, and a horizontal screen when held horizontally. The rotation time of the screen is within 2 seconds.

## 2.6 External USB flash disk

Insert a USB flash disk into the USB HOST port, through a transfer cable (not included), like the following figure illustrates. The USB flash disk can be used after it is connected to the device. Files can be copied between the device and USB flash disk. Always unmount the device before removing it from the tablet.

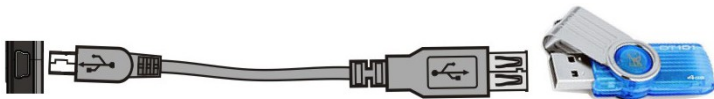

## 2.7 Network Connection

### Wireless network:

1. Select the *Settings* icon under the shortcut bar of the desktop
2. Select *Wireless & Network* in the Settings menu
3. Check off the WI-FI box to turn on WI-FI
4. Select *WI-FI Settings* to set up the WI-FI network



5. All connections the device finds will be listed. Touch the connection to connect to it.
6. If the connection was successfully connected previously, the information will be stored. Select *Connect* in the pop-up window to start the connection, while selecting *forget* to delete connection information.
7. If the connection is not encrypted, select *connect* in the pop-up window to start the connection.
8. If the connection is encrypted, input the password in the pop-up window and click *connect* to start the connection.
9. After successfully connecting to the network, the WI-FI icon will appear in the status bar at the top of the desktop, indicating the strength of the connection.

### **3. Input Operations**

#### **3.1 Keyboard**

When using procedures or files that need a user input, the keyboard will automatically appear on the screen.

Note: The tablet supports external USB keyboards, but when using an external USB keyboard, some keys may not function.

#### **3.2 Touch screen**

The touch screen can track the movement of fingers, which can carry out the following operations:

*Click:* Select an icon or option needed by tapping it with your finger.

*Long Press:* Touch and hold an icon/area to allow for extra options to appear.

*Drag:* Touch and hold an icon to drag onto the desktop, to move them to different pages or to add application icons to quick bar..

Note: Please do not place objects on the surface of the touch screen that may [scratch](#) or damage it. A tablet stylus can replace the use of fingers.

### **3.3 Mouse**

The device supports an external USB mouse. Insert the USB mouse into the HOST port through the same transfer cable to carry out functions of clicking, selecting, dragging, sliding, and popup menus through the right click.


## **4. Desktop**


### **4.1 Status bar**


The status bar is on the top of the screen. It has one soft button on the left and five on the right. They are: Home, Screenshot, Volume Down, Volume Up, Menu, and Back. The status bar also shows signal strength of WI-FI, the battery status, current time and other system information.


### **4.2 Main interface**

The tablets' main interface page includes two modes: desktop screen and application screen. The two modes can be switched by the central shortcut button. The interface of the desktop is shown in the following figure:

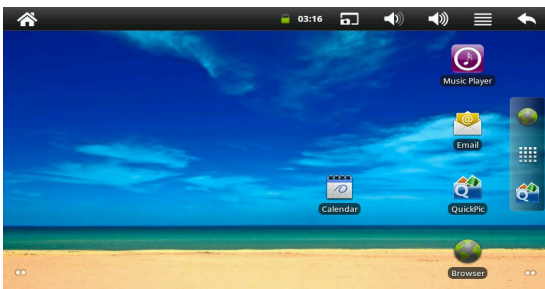

Click the  button on the quick bar to enter the application screen. The application screen is shown as the following figure:

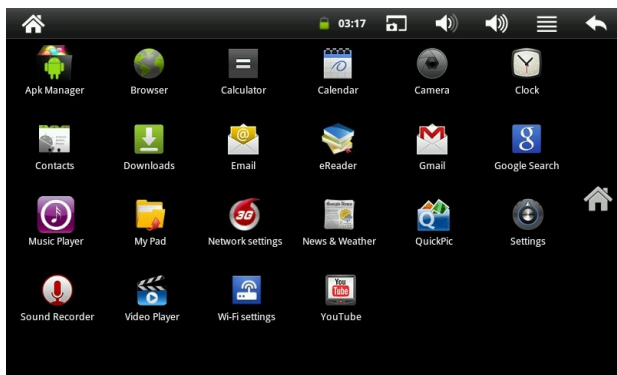


Tap the  button to return to the home screen (Desktop).

### 4.3 Shortcut

In the desktop home screen, press the Menu button or tap  on the status bar.


A menu will pop up on the bottom of the screen. Menu items includes: Add, manage apps, wallpaper, search, notifications, settings, and animation mode.

## 5. Web Surfing

Users can access the Internet by clicking on the browser icon  on the desktop to open web browser.


## 6. Applications


### 6.1 Email

Click the email icon  to enter Email. The following operation can be carried out:

1. Setup email account
2. Set up new email
3. Receive and send emails
4. Download or open attachments

### 6.2 File browsing

Click My Pad icon  to enter file browsing interface.

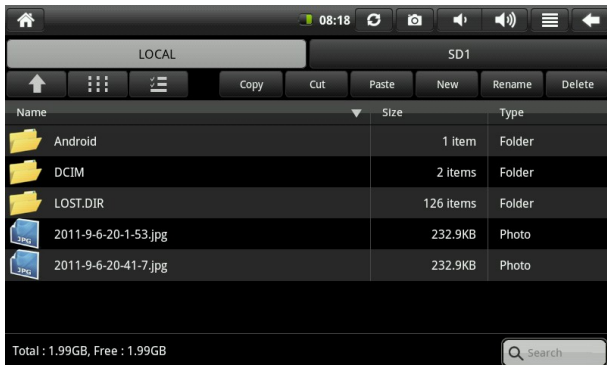

Click to enter browsing interface to carry out: copy, cut, paste, new, rename, delete and other operations on LOCAL, SD1 and USB flash disk.

### File installation:


To install software in the file browser, you only need to click the installation file with extension name *.apk*. The installation prompts will popup. Select *install* to install the software to the device.



## 6.3 Music




Click the icon to enter music mode.

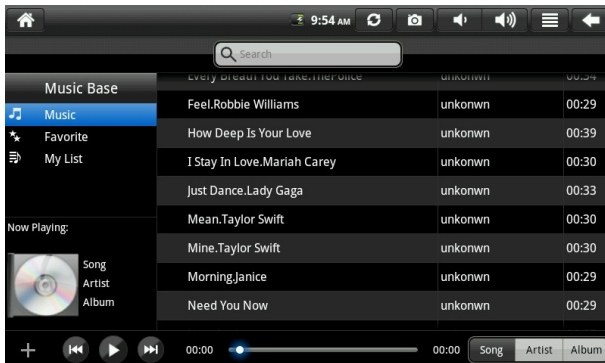Click on a song to play it.



1. Click the icon  to enter shuffle mode.
2. Click the icon  to switch between all repeat mode and single play

## 6.4 Video Player:

 Click the icon  to enter the video interface. Click on a video to play it.

The interface is showed as following:



2. Click the icon



to change view modes. The interface is showed as following:



## 6.5 Calendar


Click the calendar icon



to check date and time, add memorandum etc. The


calendar can be used only after being set. The specific operation is as follows:

1. Firstly, connect the device to the wireless network, and then open the calendar. A [dialog box](#) will come up asking to *Add an Exchange account*. Input the [email address](#) and password, and then click *Next*.

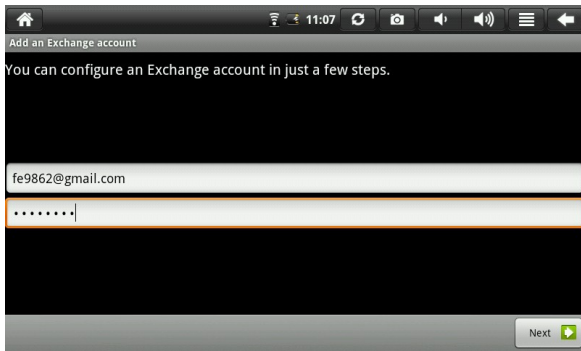

2. This screen will automatically exit and return to the main screen after setup. Now you may set the date, add memorandums, etc. Remove the [email address](#) by restoring to the factory settings.

3. Click the menu button to show the following shortcut menu: *1 day, 7 weeks, 31 month, Agenda, Today, and more*. The interface is shown as following:

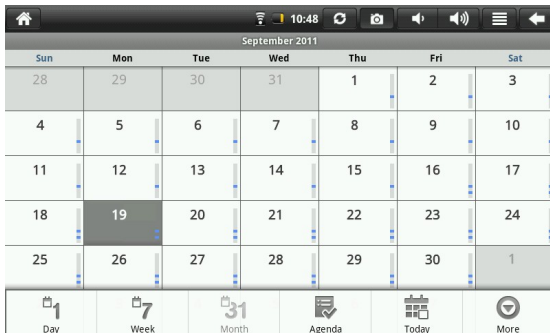




## 6.6 Calculator

Click the icon



to carry out calculations. It's showed as the following figure:

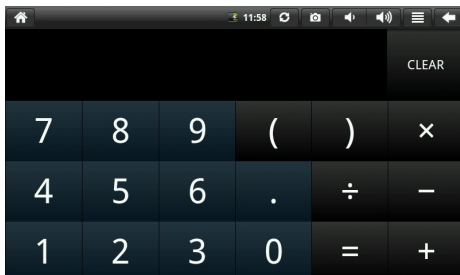





## 6.7 Recorder

Click the icon

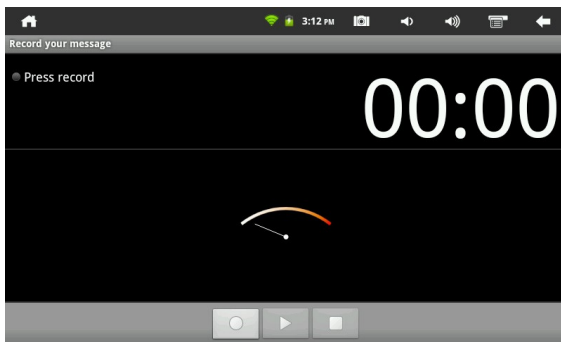


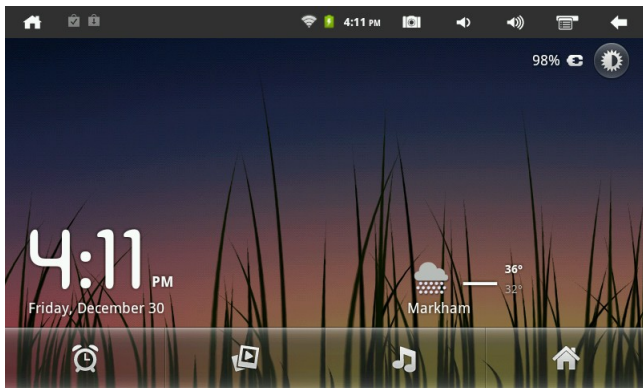
to enter audio interface:




1. Click the icon  button to start recording.
2. Click the icon  button to stop recording. A prompt will ask if you would like to keep or discard the recording.
3. Click the icon  to listen to the recording.

## 6.8 Clock

Click the icon  to enter the desktop clock interface, which has an alarm clock, slideshow mode, music mode, and other functions. It appears as the following figure:



## 7. Camera

Click the icon  to enter the camera mode.


### **Its operation is described as follows:**

1. Click the icon on the bottom right corner to take photos. Photos can be stored in DCIM/CAMERA under the root directory of memory card.
2. Move the slider on the right upward to switch to video mode.
3. Click the icon on the top right corner to view the last photo taken. By pressing the menu button you can use the functions: *Slideshow*, *Details*, *Delete*, *Share*, and *Rotate*. Also, you may set this photo as a contact's icon or as your wallpaper. Click the *back* button to return to camera.


### **7.1 APK manager**





Pre-installed software cannot be displayed in the APK manager. The APK manager can display installed or uninstalled APKs on the memory card. Install/Uninstall, select, scan path, exit and other functions can be operated. The interface appears as the following:

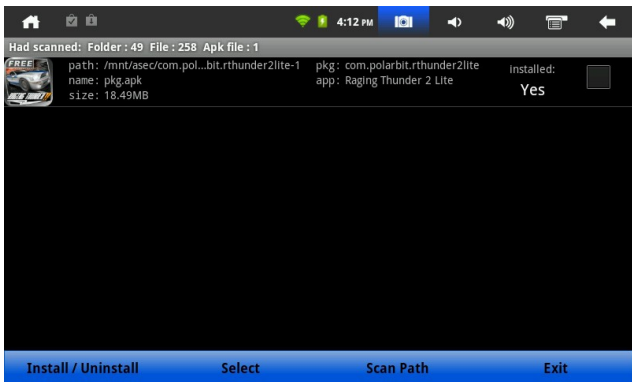

## 8. Tips and skills

 
To return to the home screen – click 

To adjust the volume – click  / 

### 8.1 Convenient settings

#### 8.1.1 Wireless Internet Settings:

Click the wireless Internet Settings icon  to enter the wireless internet connection interface. The interface is showed as following:

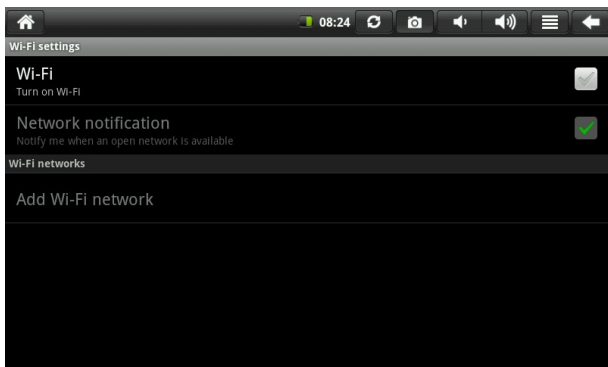

After clicking on the name and inputting the password, click “connect” to connect to the wireless network

## 8.2 Use battery prompts

The wide screen of the device will use a lot of power. If you want to extend the battery time, you can reduce the use of the following functions:

1. Watching movies, listening to music or taking photos
2. Display brightness: To reduce, press *menu* button - *settings* - *display* - *brightness* (turn down brightness)
3. Network search: Press the *menu* button – *settings* – *wireless & network* - *WIFI settings* – uncheck *network notification*

## 9. Settings

Click on the settings icon  to carry out personalized settings.


### 9.1 Wireless and Network

1. To open WIFI settings, press the *menu* button - *settings* - *wireless & network* – select the *WIFI* checkbox.
2. To set and manage wireless access points, press the *menu* button - *settings* - *wireless & network* – *WIFI settings*

Please refer to 8.1.1 Wireless Internet connection in convenient settings for specific information

### 9.2 Sound

Set the Ringtone and Notifications.

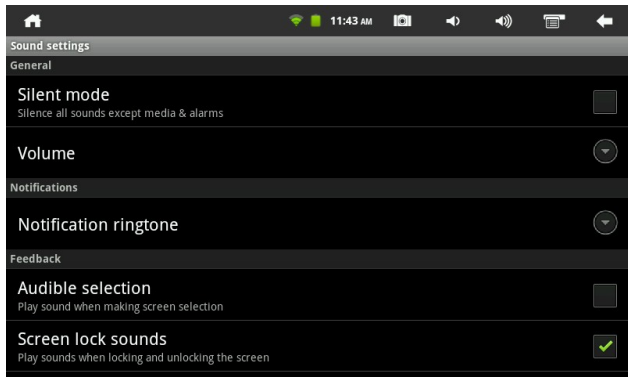

#### Silent mode

To set all sounds to mute except the media and alarm clock, press the *menu* button - *settings* – *sound* – check *silent mode*.

### **Volume**

To set volume of media, alarm, and notifications: press the *menu* button - *settings* - *sound* - *volume*.

### **Notification ringtone**

To set ringtone, press the *menu* button - *settings* - *sound* - *notification ringtone*

### **Audible selection**

To make sounds with screen selections, press the *menu* button - *settings* - *sound* – Check *Audible selection*

### **Screen lock sounds**

To make sounds when screen is locked/unlocked, press the *menu* button - *settings* - *sound* – Check *Screen lock sounds*

## **9.3 Display**

### **Brightness**

Press the *menu* button – *settings* - *display* (display settings) – *brightness*

### **Automatic screen rotation**

Press the *menu* button – *settings* - *display* (display settings) – check *auto-screen rotation* to automatically change display orientation. If the check box is checked, the interface of the device will automatically follow the users orientation of the device.

### **Animation**

To display all or part of the animations on windows, press the *menu* button - *settings - display* (display settings) – *animation*.


## Screen timeout

To adjust the delay before automatically locking of the screen, press the *menu* button - *settings - display* (display settings) - *screen timeout*.

## 9.4 Location & Security

### Use wireless networks

To use the wireless network, press the *menu* button - *settings - location & security* – check *Use wireless networks*

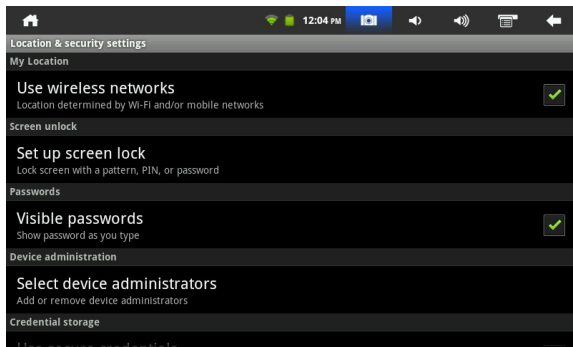

### Passwords

To show passwords as you type, press the *menu* button - *settings - location & security* - check *visible passwords*.

## 9.5. Applications



## **Unknown source**

To allow the installation of applications from non-electronic markets.

## **Manage applications**

To manage and remove installed applications, press the *menu* button - *settings* - *applications* - *manage applications*.

## **Running services**

To view and control the services currently running, press the *menu* button - *settings* - *applications* – *running services*.

## **Storage use**

To view storage used by applications, press the *menu* button - *settings* - *applications* – *Storage use*.

## **Battery use**

To view what has been using the battery, press the *menu* button - *settings* - *applications* – *Battery use*.

## **Development**

To set the development options of applications, press the *menu* button – *settings* - *applications* - *development*.

## **9.6 Privacy**

### **Factory data reset**


To erase all data on the device and restore settings to factory default, press the *menu* button – *settings* – *privacy* – *Factory data reset*

### **Format local storage**

To format (clear) local storage, press the *menu* button - *settings* - *privacy* - *format local*


## 9.7 Storage

Check the available storage space

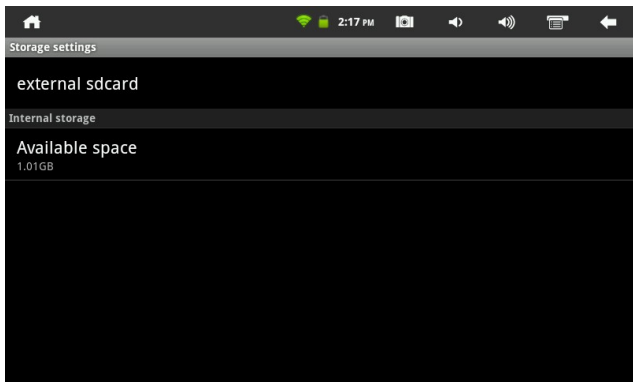


### Storage devices (SD card and USB flash disk)

To check and operate the storage devices, press the *menu* button - *settings* – *external sdcard* and *internal device storage*. Select the corresponding storage device under the storage device directory. The total space and available space can be checked after entering the storage device interface. The *unmount* operation also can be carried out. The interface showed as the following figure:

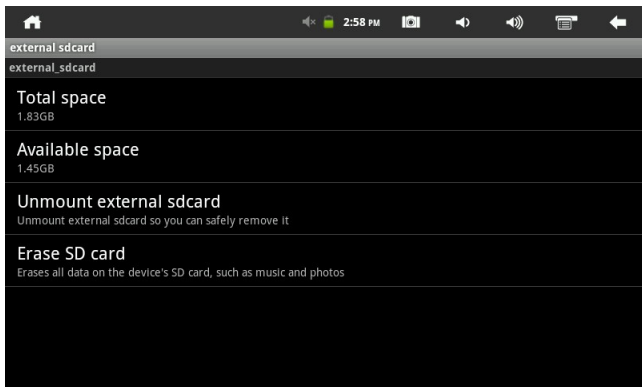

## 9.8 Language & keyboard

Set language (language and area), text input and automatic correction options.

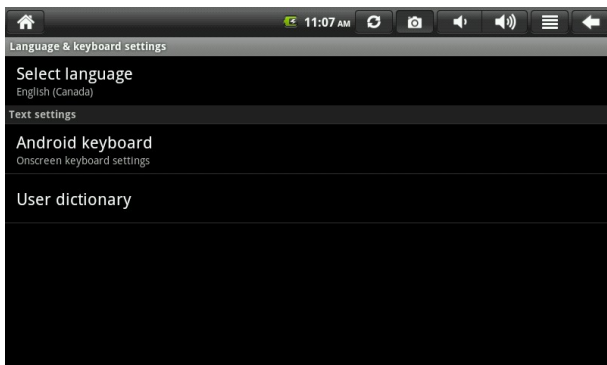

## Select language

To select language and area, press *menu - settings - language & keyboard – select language*

## User dictionary


To add words to the user dictionary and delete words from the user dictionary, press *menu - settings - language & keyboard – user dictionary*.

## Android keyboard

To carry out Android keyboard settings, press *menu - settings - language & keyboard - Android keyboard*


## 9.9 Date & Time

To set date, time, time zone, 24-hour format and date format, press *menu - settings - date & time*.

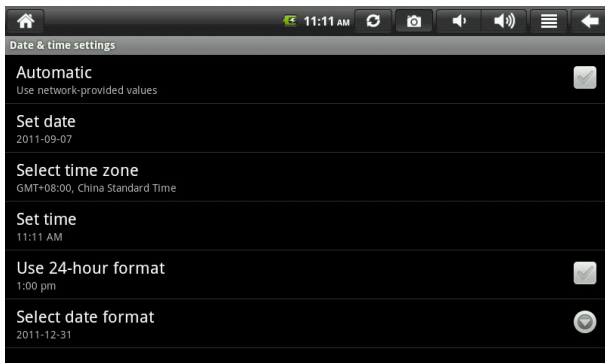

## 9.10 About device

System updates, Status, Battery use, Legal information, model number, android version, and software versions.

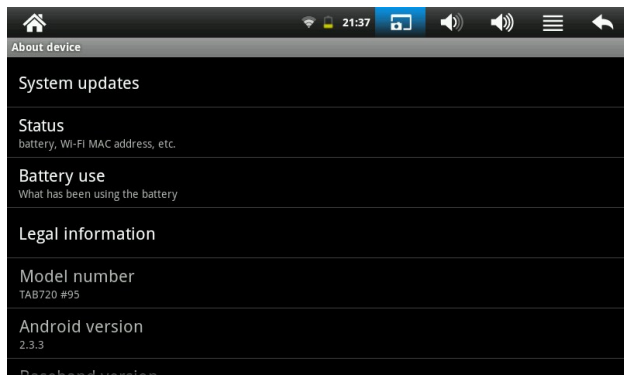

## 10. The use of HDMI

Videos on the tablet can also be viewed on equipment through HDMI (such TV sets with HDMI port). The maximum output resolution from the tablet is 1080p. This method is explained below:

1. Turn on the tablet.
2. Connect an HDMI cable (not included) with an HDMI display device. Turn on the display device and a message will pop up on status bar. Note: The tablet screen will remain on except during video playback.
3. Play video files on the tablet or have the HDMI display device as a second screen to browse the internet, play games, view images, etc.

## 11. Lock Screen

To unlock the screen/device:

Press the power button to turn the screen on, then you will see the lock screen.


Slide unlock icon upward to unlock and enter the interface.

## 12. Troubleshooting


### 12.1 Close Applications

All applications running will occupy memory on the device. Too many applications open will influence the running speed of the device. Therefore, unused applications should be closed in time to reduce memory usage and keep the normal operating speed of the device.

To close applications, in the home screen press *menu – settings - applications - running services*. The interface is showed as the following picture:

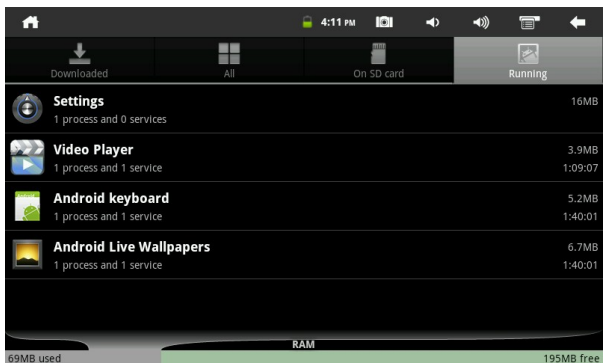

Tap the application that is to be closed. The interface is showed as follow:

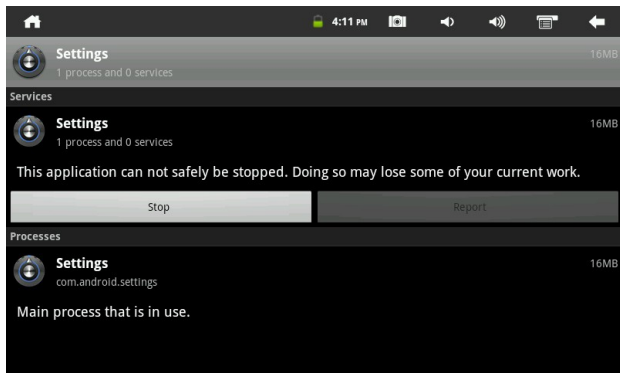

Tap *Stop* - *OK* to close the application.

## 12.2 Forced shutdown

Press and hold the power key of the device until the screen shuts off.

## 12.3 Restore defaults

To restore the device to original factory settings and clear all information, press the *menu* button - *settings* - *privacy* – *factory data reset* – *reset device*.

**WARNING:** After selecting to reset the device, all Google accounts, data, application settings, and downloaded applications will be deleted. Use this function with caution.

## 13. Specifications

Multimedia Features	<b>Video</b>
	AVI (DIVX/XVID/MPEG4), 3GP, MOV, MPEG, MKV, FLV, RMVB, RM, MP4, VOB WMV, ASF
	<b>Audio</b>
	MP3, WMA, APE, FLAC, AAC, OGG
	<b>Image</b>
	JPG, BMP, GIF, PNG

	USB port:	USB host x1, for connection with USB Mouse, keyboard, U-disk, portable hard disk, 3G dongle etc. USB OTG x1
	Earphones:	3.5mm stereo earphone jack



## 14. Frequently Asked Questions

### 14.1 I cannot connect to the Internet using Manual Setup.

*Answer:* Ensure you have used *Menu* → *Save* when exiting the advanced settings page.

### 14.2 I can see my access point name, but I cannot connect to the Internet.

*Answer:* If your access point (AP) supports multiple access points at a time, you may have to connect the device using WPA encryption and not WEP. Please refer to your AP device manual for setup details.

### 14.3 My Micro-SD card is not being detected and/or shows *damaged SD card*.

*Answer:* Please re-insert the Micro-SD card and try again. If this does not work, please restart the device again with Micro-SD card inserted. Please ensure that you have removed the Micro-SD card using the correct procedure as described in Using Micro-SD card.

### 14.4 My system freezes when installing / removing applications.

*Answer:* This may be caused by a memory handling error. Use *Force Close* icon in application manager before removing the software. If the system continues to freeze, please restart your device for a complete clearing of all running processes.

### 14.5 My device freezes while powering-on.

*Answer:* This may be caused by a failure in reading the Micro-SD card. Please turn off the device and power-on again. Also, please ensure that the card is fully inserted. Alternatively, please try to start the device with the Micro-SD card removed.

#### 14.6 Can I manually change the screen orientation?

*Answer:* Yes. Please check in “*Display*” in “*Settings*”, Touch “*Auto-rotate screen*” to toggle.

#### 14.7 The device showed an error message and the application closed: “android.process.acore” fault.

*Answer:* This happens when the system has too many applications running at once.

#### 14.8 What is the life of the battery?

*Answer:* On average use, a complete charge will give up to 6-15 hours battery life with Wi-Fi turned on and connected.

#### 14.9 Can I amend the Operating System or code on the device myself?

*Answer:* No. Any misuse of the tablet in this way will void the warranty.

#### 14.10 I have my Micro-SD card inserted, but I am unable to use applications that require a Micro-SD card.

*Answer:* The device checks the first Micro-SD card as the default slot. Please insert the Micro-SD card to the first slot when using the voice recording, and applications such as SlideMe.

#### 14.11 The touch-screen is not very responsive

*Answer:* As the touch-screen is capacitive, please use your finger-tips for best results. Do not use a objects and remove any gloves before use.

## Recycling



This crossed bin symbol on the device indicates that the product, at the end of its life, must be disposed of separately from domestic waste, either by taking it to a separate waste disposal site for electronic devices or by returning it to your dealer when you buy another similar device. The user is responsible for taking the device to a special waste disposal site at the end of its life. If the device is collected correctly as separate waste, it can be recycled, treated and disposed of ecologically. This avoids a negative impact on both the environment and health, and contributes towards the recycling of the product's materials. For further information regarding the waste disposal service available, contact your local waste disposal agency or the place of purchase.

## Contact Us

### Need assistance? Please call us!

If you encounter any difficulties with this product, please visit our website at [www.hipstreetonline.com](http://www.hipstreetonline.com) and review our support section or call us. Our representatives are ready to help you with any questions about your product. We can guide you through connections, first-time use, or any of the features. Just give us a call or send us an email.

Customer & Technical Support: **1-888-456-2426**

Monday through Friday: 8:30am – 5:00pm EST

Email: [support@hipstreetonline.com](mailto:support@hipstreetonline.com)

### We want you to start enjoying your product right away!

## Battery statement

### Product and Battery Disposal

This product contains a built-in lithium battery and should not be disposed of in normal household waste. The battery in this device is not intended to be removed by the individual or end user. For disposal and recycling, please contact your local waste management authorities.

The recycling and processing of electronic waste will make a significant contribution towards helping protect the environment.

**Warning: To reduce the risk of fire and burns; do not disassemble, crush,**

**puncture, short external contacts, or dispose of in fire or water.**